

Made in Taiwan

## Foot Lifting Solenoids



#AK-85 for DDL-8700 etc.

#AK-85B for DDL-8700B

for Juki DDL-8700 etc.

Stroke : 10mm Torque : 10kgs



#AK-89

for Juki LH series

Stroke : 10mm Torque : 10kgs



#AK-118

for Juki DDL-9000 etc.

Stroke : 10mm Torque : 10kgs



#AK-138

for Juki DDL-9000A, 9000BSS etc

Stroke : 10mm Torque : 10kgs



#KS-50 Brother S-7200A

#KS-50C Brother S-7200C

Stroke : 10mm Torque : 10kgs




#PF-1

#PF-1A

#PF-1N

Stroke : 20~25mm Torque : 15kgs

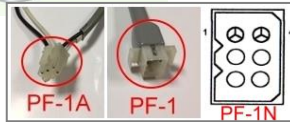

Important !

Please specify machine make and model when ordering.

The PF-1 series is designed for all industrial sewing machines.



#KS-7300A Brother S-7300A

Stroke : 10mm Torque : 10kgs



#MF-61

Stroke : 20~30mm

Torque : 20kgs



#KS-7000 Brother S-7000DD

Stroke : 10mm Torque : 10kgs



Rear cover packing

(#SB3434001)



#SB-1 Power pack

for all plain machines

To be used with conventional clutch motor



#WK-20 Foot switch

#KS-1 Knee switch

